

OPERATING INSTRUCTIONS

(Fig. 1) Controls Layout

Power Button - Push blue tail button for operation. The tail button will highlight blue to reflect 'on' and ready for use.

Notice: This light will blink when charging, low, or on battery charge. The control knob is used to select desired light operation. Move the LED head to desired location and turn the control knob to desired light sequence.

WARNING – The light was designed for night use outdoors, so the LED Head can get 'HOT' after hours of continual use inside closed spaces. A shield has been placed over the LED head for your convenience, so when moving or adjusting the light to a desired location discomfort of the LED Head will not be felt.

Battery Charging:

Turn the LED light control knob to the 'off' position. Select the 'on' position with blue tail light in steady mode. Plugged into the power source and into the Switchcraft™ receiver, the blue switch will 'blink' to reflect battery charge. The battery will stop 'blinking' when all batteries have been topped off. The device can charge without being turned 'on' and while in use; however, the noticeable battery top-off will not be recognized.

Maintenance:

If the battery is not used for a long period, charge it every (3) three months, and each time 2~3hrs.

Storage:

If the battery should have to be stored for a long period of time, charge the battery 40%-70% of electric capacity.

The Battery and charger should be stored in clean, dry and ventilating place, and should not be together with corrosive material, keep the battery away from fire and heat sources.

Fig. 1 – Bottom View

